#### Right choice for ultimate yield

LSIS strives to maximize customers' profit in gratitude of choosing us for your partner.

# CC-Link/IE Option User Manual



User Manual

LSis



#### Safety Instructions

- Use this board after read Safety Instruction of this manual carefully before using and follow the instructions exactly.
- Please hand this user manual to end user and trouble shooting manager
   After read this manual, keep it at handy for future reference.
- · Alter read this manual, keep it at handy for future reference.
- 사용 전에 '안전상의 주의사항'을 반드시 읽고 정확하게 사용하여 주십시오.
   본 설명서는 제품을 사용하는 사람이 항상 볼 수 있는 곳에 잘 보관하십시오.

Thank you for purchasing iS7 CC-Link option board of LS Variable Frequency Drives!

#### Safety Instruction

- To prevent injury and danger in advance for safe and correct use of the product, be sure to follow the Safety Instructions.
- The instructions are divided as 'WARNING' and 'CAUTION' which mean as follow.



WARNING This symbol indicates the possibility of death or serious iniury. This symbol indicates the possibility of injury or

CAUTION damage to property.

•The meaning of each symbol in this manual and on your equipment is as follows.



This is the safety alert symbol.

This is the dangerous voltage alert symbol.

- After reading the manual, keep it in the place that the user always can Contact easily.
- Before you proceed, be sure to read and become familiar with the safety precautions at the beginning of this manual. If you have any questions, seek expert advice before you proceed. Do not proceed if you are unsure of the safety precautions or any procedure.

#### /!\ WARNING

- Be cautious about dealing with CMOS elements of option board. It can cause malfunction by static electricity.
- Connection changing like communication wire change must be done with power off.

It can cause communication faulty or malfunction.

- Be sure to connect exactly between Inverter and option board. It can cause communication faulty or malfunction.
- Check parameter unit when setting parameter. It can cause communication faulty

### Introduction

Г

The CC-Link IE Field Master can operate the IS7 drive and monitor the state of IS7 in the CC-Link IE Field network through the IS7 CC-Link IE Field communication option board.

SV-IS7 CC-Link IE Field is 1Gbps Ethernet based network. It is not compatible with CC-Link.

Item	Description				
Туре	Inverter plug-in option, RJ-45 Connection type				
Power	From Inverter				
Transmission	1 Gbps				
Speed					
Communication	Token passing				
type					
Max number of	120, Heterogeneous	connections are pos	ssible.		
stations	(When used with h	igh-capacity devices	s, the nu	umber of	
Stations	connections decrea	ses)			
Distance	Max. 100m(Twisted	pair)			
Connection	No limits.	No limits.			
Branch					
Topology	Line/Ring/Star topol	Line/Ring/Star topology			
	Ethernet cable (IEEE 802.3 1000BASE-T compliant cable				
Cable	or ANSI/TIA/EIA-568	8-B(Category 5e) co	mpliant	shielded	
	4-pair branched cable				
Connector	Shielded RJ-45				
	Intelligent device	Maximum cycle	RX	32 bit	
	station	size(per node)	RY	32 bit	
Nada			RWr	8 word	
noue			RWw	8 word	
		Transient	Not ava	ailable	
		transmission			

### 1. Specification of CC-Link IE Field Communication Option Board

# 

٦

# 2. Product Components

- SV-IS7 CC-Link IE Field communication option board	1 ea

- Screw for fixing on the inverter2 ea- SV-IS7 CC-Link IE Field User Manual1 ea

**LS** 15 | 3

### 3. Installation of the SV-IS7 CC-Link IE Field Option

(1) SV-IS7 CC-Link IE Field Option Module



### (2) SV-IS7 CC-Link IE Field Option Board Layout



٦

# CC-Link IE Field Communication option board Æ Ð $\square$ $\square$

### (3) Mounting the communication option board on SV-IS7 drive

### 4. Network Connection

Connection terminal of communication cable

Pin No.	Signal	Description	Color
1	TX/RX+	Transmitted/Received data Plus	White/Yellow
2	TX/RX-	Transmitted/Received data Minus	Yellow
3	TX/RX+	Transmitted/Received data Plus	White/Yellow
4	TX/RX-	Transmitted/Received data Minus Blue	
5	TX/RX+	Transmitted/Received data Plus White/Blue	
6	TX/RX-	Transmitted/Received data Minus Green	
7	TX/RX+	Transmitted/Received data Plus White/Brown	
8	TX/RX-	Transmitted/Received data Minus Brown	

LSIS | 5

(4) Communication Cable Connector



\*\* Wires connected to pin #1 and pin #2 must be twisted.

\*\* Wires connected to pin #3 and pin #6 must be twisted.

### Maximum Time-Delay for CC-Link IE Communication

The table below contains the maximum time-delays for each profile that are available with the CC-Link IE communication option card. The time-delay is the time taken to process data and return it to the master PLC.

When the master PLC communication cycle time is less (shorter) than the maximum time-delay, accurate communication from the CC-Link cannot be guaranteed. To guarantee communication accuracy, the master PLC's communication cycle time must be more (longer) than the maximum time-delay.

Mode	Maximum Time-delay for CC-Link Communication
Profile1	80ms
Profile2	15ms

**메모 [노태희1]:** 추가\_131217

6 | LSis

٦

### (1) Bandwidth

CC-Link/IE Field communication requires CAT 6a network cables.

# (2) Twist- Pair Cable Types



<u>UTP</u>

<u>FTP</u>



Туре	Description	Application
UTP	Unshielded high-speed	Max. 200MHz
(U.UTP)	signal cable	Voice, data and low quality video signals
FTP (S.UTP)	Single shielded cable (shielded core only) *Shield material : Al/plastic complex foil or copper braid	Max. 100MHz Electrically stable and protected against EMI Voice, data and low quality video signals
STP (S.STP)	Double shielded cable (shielded pairs and shielded core) *Shield material(pair): AL/Plastic complex foil *Shield material(core): AL/Plastic complex Foil or copper braid	Max. 500MHz Voice, data and video signals Replaces 75Ω coaxial cable

LSIS | 7

Г

(3) Network Connection



\*CC-LINK IE Field Option does not distinguish the directions of LINK1 and LINK2

Network Type	Configuration
Star topology	
	LING ARAGE A LING ARAGE A ARAGE A
Line topology Ring topology	

# 8 | **LS**is

٦

### 5. LED Display

4 green and red LEDs on the CC-Link IE Field communication board displays the status of CC-Link IE Field communication board. LED is organized as following.

Green RUN	Green/R SD/RD	ed Green/Red Red DLNK/ERR LERR
$\bigcirc$		
LED Name	Color	Function
RUN	Green	<ul> <li>ON – Communication transmitting/receiving</li> <li>Flickering at the 200ms – Communication transmitting/receiving is not established</li> <li>OFF – Check if the Communication cable is connected correctly or H/W failure</li> </ul>
SD	Green	<ul> <li>ON – Data transmitting</li> <li>OFF – Waiting for data transmission</li> </ul>
RD	Red	<ul><li>ON – Data receiving</li><li>OFF – Waiting for data receive</li></ul>
DLNK	Green	<b>ON</b> – Cyclic data transmitting

		<b>OFF</b> – Cyclic data waiting of connection termination	
		<b>ON</b> – communication error with PLC/ Lost command	
ERR Red	error		
		OFF – Normal state	
LERR Red		<b>ON –</b> Receive data error or link error	
		OFF – Normal state	

**LS**15 | 9

# 6. Trouble Shooting

Г

LED Display				Causa	Countermosoure	
RUN	SD/RD	DLINK/ERR	LERR	Cause	Countermeasure	
OFF	-	-	-	Power supply is not energized.	Check if the communication board is installed on the inverter. Check if the inverter is turned On.	
Flickering with 200ms	-	-	-	Abnormal Interface communication between communication board and inverter	Check if communication cable and power supply cable is separated. After the power of inverter is turned Off, and then energize the power of inverter.	
-	-	RED ON	-	Communication is not established.	Check if communication cable and power supply cable is separated. After the power of inverter is turned Off, and then energize the power of inverter.	
-	-	-	RED ON	Abnormal Interface communication between communication board and PLC	Check if communication cable and power supply cable is separated. Check the status of the connected nodes.	

### 7. Quick Communication Start

Install the CC-Link IE Field communication board while inverter power supply is turned off. After inverter power supply turns on, check CNF-30 parameter. It should be 'CC-Link IE Field'.

(1) Connect to the network with communication cable via CC-Link IE Field communication board.

(2) Set the Network ID of inverter at parameter COM-10

(3) Set the Station ID of inverter at parameter COM-11

(4) Set to 'Yes' at COM-94 Comm Update

(5) Check that RUN LED of CC-Link IE Field Communication board is turned on. If not, check that the parameter value of COM-10, COM-11 of Keypad is correct.

**LS** 15 | 11

Г

Code	Parameter Name	Initial Value	Range
CNF-30	Option-1 Type	-	-
DRV-06	Cmd Source	Fx/Rx-1	Keypad Fx/Rx-1 Fx/Rx-2 Int. 485 FieldBus PLC
DRV-07	Freq Ref Src	Keypad-1	Keypad-1 Keypad-2 V1 I1 V2 I2 Int. 485 Encoder FieldBus PLC
PRT-12	Lost Cmd Mode	None	None FreeRun Dec Hold Input Hold Output Lost Preset
PRT-13	Lost Cmd Time	1.0sec	0.1~120.0sec
PRT-14	Lost Preset F	0.00Hz	0.00~400.00Hz
COM-06	FBus S/W Ver	-	-
COM-09	FBus LED		-

# 8. Keypad Parameter related with CC-Link IE Field Communication

COM-10	Opt Parameter1	1	1~239 Network ID
COM-11	Opt Parameter2	1	1~120 Station ID
COM-12	Opt Parameter3	0	0 (Profile1) 1 (Profile2)
COM-31	Para Status-1	-	0x0000
~COM-38	~ Para Status-8		~0xFFFF
COM-51	Para Control-1	-	0x0000
~COM-58	~ Para Control-8		~0xFFFF
COM-94	Comm Update	No	No
			Yes

### (1) Option-1 Type (CNF-30)

- $\checkmark$  It displays the name of communication board installed on the inverter.
- ✓ It displays 'CC-Link IE Field' when CC-Link IE Field communication board is installed correctly and there is no fault.

### (2) Cmd Source (DRV-06)

- ✓ It sets the run command source of inverter
- ✓ The parameter sets to 'Fieldbus' when it commands Run/Stop operation to inverter by CC-Link IE Field communication.

### (3) Freq Ref Src (DRV-07)

✓ It sets the frequency command source of inverter.

The parameter sets to 'Fieldbus' when it commands Command frequency by CC-Link IE Field communication.

**LS** 13

#### (4) Lost Cmd Mode (PRT-12)

 It designates the Run mode when Lost Command is occurred during the time of PRT-13 Lost Cmd Time.

None: It does anything when Lost Command is occurred.

- **FreeRun:** After the status of inverter is changed to Lost Command, motor will free-run to stop and Trip will be occurred.
- **Dec:** After the status of inverter is changed to Lost Command, motor will decelerate to stop and Lost Command Stop will be occurred.
- Hold Input: Running with the last Run command and Lost Command Warning will be occurred.
- Hold Output: Running with the current run speed and Lost Command Warning will be occurred.
- Lost Preset: Running with the preset value of PRT-14 and Lost Command Warning will be occurred.

### (5) Lost Preset F (PRT-14) – Lost Preset Frequency

✓ When PRT-12 Lost Cmd Mode is set to Lost Preset, inverter will operate with the frequency which is set in Lost Preset F at Lost Preset Frequency occurred.

#### (6) Lost Cmd Time (PRT-13) – Decision time of Lost Preset Frequency

- ✓ If Preset Frequency is lost for the preset time of PRT-13 Lost Cmd Time, it is recognized to Lost Preset Frequency.
- If the communication is restored within the time of PRT-13 Lost Cmd Time, it is not recognized to error.



#### (7) FBus S/W Ver (COM-06)

✓ It displays the version of communication board installed on the inverter.

#### (8) FBus LED (COM-09) – LED display for On/Off

- ✓ It displays the status information of CC-Link IE Field communication.
- ✓ It displays 4 LEDs at COM-0 FBus LED.
- LED status is displayed at COM-9 FBus LED parameter by keypad. 3 LEDs among 4 LEDs displayed indicates the status of CC-Link IE Field communication option board. It displays the information about CPU status, Inverter Interface disconnection and failure of saving the Station ID and Baud Rate to EEPROM in order of from right to left.

Bit	Description	Status	Causes of Status
0	RUN LED	ON	Normal communication
1	SD/RD LED	ON	Normal communication
		On or Elickor	Normal communication /
	DENIVEIXIX		Fault has occurred.
3	LERR	On	Fault has occurred.

Example of COM-09 LED status)



COM LED	RUN LED	ERR LED	CPU LED	
OFF	OFF	ON	OFF	

### (9) Opt Parameter1 (COM-10) – Network ID setting

- ✓ Set the network ID of CC-Link IE Field.
- ✓ Physically connected communication devices must use the same network id.
- ✓ The value of Baudrate will be applied to CC-Link option board after Comm Update sets to 'YES'.

**LS** 15 | 15

### (10) Opt Parameter2(COM-11) – Station Number setting

- ✓ It sets the Station ID of CC-Link IE Field. It can set Station Number from 1 to 120.
- ✓ Station ID can not be duplicated. Check if Station ID is not duplicated.
- ✓ The value of Station ID will be applied to CC-Link option board after Comm Update sets to 'YES'.

### $\star\star\star$ Caution

### Example of network connection)



- ✓ Same station numbers can not be used more than once in a network.
- ✓ Set the station number sequentially in order of connection. (Do not create a dead station as station 1, station 2, and station 4.)

### (11) Opt Parameter3 (COM-12) – Profile setting

- ✓ LSIS provides two profiles.
- $\checkmark$  Profile2 is more responsive than Profile1.

### (12) Para Status-1~8 (COM-31~38)

- ✓ It is displayed only when the setting value of COM-11 Opt Parameter2 is '1'(Profile2).
- ✓ It set the inverter address to read in Para Status 1~8 when read operation of command(RWr0~7) of remote register is executed.
- ✓ For example, If Para Status-1 sets to 0x0003, the saved value in address which is set in 0x0003 will be read.

### (13) Para Control1~8 (COM-51~58)

- ✓ It is displayed only when the setting value of COM-11 Opt Parameter2 is '1'(Profile2).
- ✓ It set the inverter address to read in Para Control 1~8 when read operation of command(RWw0~7) of remote register is executed.
- ✓ For example, if the value of Para Control-1 is set to 0x1004, the value of RWw0 is written to the 0x1004 address.

### (14) Comm Update (COM-94)

- ✓ The value of COM-07 FBus ID and COM-10 Opt Parameter 1 will be applied to CC-Link IE Field option board after Comm Update sets to 'YES'.
- ✓ The changed Station ID and communication speed will be applied to CC-Link IE Field option board after Comm Update sets to 'YES'.

### 9. CC-Link IE Field Data List

Inverter occupies the buffer memory 1 station of master. It means the input/output data information between master and inverter.

**LS** 17

Γ

### 9.1 Details of Remote Input and Output Signals

Remo	te Output Signals	Remote Input Signals			
(Maste	er unit to Inverter)	(Inve	rter to Master unit)		
Device No.	Signal Function	Device No.	Signal Function		
RY0	Forward running	RX0	Forward running		
	command		r orward running		
RY1	Reverse running	RX1	Reverse running		
	command				
		RX2	Accelerating		
		RX3	Decelerating		
		RX4	Reach to preset speed		
RY2~8	N/A	RX5	DC Braking		
		RX6	N/A		
		RX7	Relay1 output terminal		
		RX8	Relay2 output terminal		
RY9	Output stop	RX9	Q1 output terminal		
DVAP	Ν/Δ	RXA	N/A		
KIA~D		RXB	N/A		
RYC	Monitor command	RXC	Monitoring		
	Frequency setting		Frequency setting		
RYD	command 1	RXD	completion 1		
	(RAM)		(RAM)		
	Frequency setting		Eroquopov ootting		
RYE	command 2	RXE	completion 2		
	(EEPROM)		completion 2		
DVE	Instruction code	DVE	Instruction code execution		
KIF	execution request	КАГ	completion (EEPROM)		
RY10~19	N/A	RX10~19	N/A		
RY1A	Error reset request flag	RX1A	Error status flag		
RY1B	N/A	RX1B	Available status to run		
RY1C~1F	System reservation	RX1C~1F	System reservation		

18 **LS**is

٦

	Remote Output Signals (Master to Inverter)						
Device No.	Signal Function	Description					
RY0	Forward running command	ON Forward running start OFF Stop command					
RY1	Reverse running command	ON Reverse running start OFF Stop command					
RY2~8	N/A	_					
RY9	Interrupting of inverter output	When it turns On, motor free-run to stop.					
RYA~B	N/A	-					
RYC	Monitor command	When monitor command (RYC) is switched On, the corresponding monitor value to RWw0 is saved in RWr0. RXC (Monitoring) switches On. Only works when the Profile 1 is selected.					
RYD	Frequency setting command 1 (RAM)	When frequency setting command 1 (RYD) is switched On, command frequency (RWw1) is written to RAM of the inverter. Frequency setting completion 1 (RXD) is turned On after completion of write. Only works when the Profile 1 is selected.					
RYE	Frequency setting command 2 (RAM, EEPROM)	When the frequency setting command (RYE) is switched on, the set frequency (RWw1) is written to RAM and EEPROM of the inverter. On completion of write, frequency setting completion (RXD) switches on. The set frequency is remained even if power of inverter is switched On/Off. Only works when the Profile 1 is selected.					
RYF	Request for command code execution	It requests the execution of the command code (RWw2). In case command code is Write request, the value of RWw3 is valid. Only works when the Profile 1 is selected.					
KY10~19	N/A	-					

### 9.2 Remote output

Γ

	Remote Output Signals (Master to Inverter)							
Device No.	Signal Function	Description						
RY1A	Inverter Reset	If an inverter has a fault, RY1A is switched On. It makes that the inverter is reset to remove the trip after removing the cause of the fault.						
RY1B	N/A	-						
RY1C~1F	System reservation	-						

#### 9.3 Remote Input

	Remote Input Signals (Inverter to Master)								
Device No.	Signal Function	Description							
RX0	Forward running command	ONForward runningOFFOther than forward running (during stop or reverse running)							
RX1	Reverse running command	ONReverse runningOFFOther than reverse running (during stop or forward running)							
RX2	Accelerating	Accelerating when it is turned On							
RX3	Decelerating	Decelerating when it is turned On							
RX4	Reach to preset speed	Reach to preset speed when it is turned On							
RX5	N/A	-							
RX6	N/A	-							
RX7	Relay1 output terminal	Terminal output when it is turned On							
RX8	Relay2 output terminal	Terminal output when it is turned On							
RX9	Q1 output terminal	Terminal output when it is turned On							
RXA	N/A	-							
RXB	N/A	-							
RXC	Monitoring	Switched On when monitor data is updating. When the monitor command (RYC) is switched							

	Remote Input Signals (Inverter to Master)							
Device No.	Signal Function	Description						
		On, the monitor value (RWw0) is set to RWr0 and monitoring (RXC) switches On. Switched Off (RXC) when the monitor command (RYC) is switched Off. Only works when the Profile 1 is selected.						
RXD	Frequency setting completion 1 (RAM)	Switched On (RXD) when the set frequency is written to the inverter by frequency setting switching On (RYD). Only works when the Profile 1 is selected.						
RXE	Frequency setting completion 2 (EEPROM)	Switched On (RXE) when frequency command is written to the inverter by Frequency setting command 2 (RYE) switching ON. Only works when the Profile 1 is selected.						
RXF	Instruction code execution completion	When the instruction code execution request (RYF) is switched on, processing corresponding to the instruction code set to RWw2is executed. The instruction code execution completion (RXF) is switched On after completion of execution of instruction code. When an instruction code execution error occurs, a value other than '0' is set in the reply code (RWr2). Only works when the Profile 1 is selected.						
RX10~19	N/A	-						
RX1A	Trip status	It turns On when the trip of inverter has occurred.						
RX1B	Available status to run	It turns On when the inverter can be available. It means that the inverter power is supplied stably and there is no fault.						
RX1C~1F	System reservation	-						

٦

**LS** 15 | 21

### 9.4 Remote Register

### (Master to Inverter)

Γ

Remote	emote		Request
Register	Name	Description	for
RWw0	Monitor code	Set the monitor code to be referenced. By switching On the monitor command flag (RYC), the corresponding to monitored data is written set to RWr0 and Monitoring (RXC) switches On.	RYC
RWw1	Set frequency (0.01 Hz Scale)	Specify the set frequency. At this time, when Frequency setting command 1 (RYD) is switched On, it is stored in RAM of the inverter. When Frequency setting command 2 (RYE) is switched On, it is stored in EEPROM that it can save the set frequency even if power is switched Off and then On. To command the frequency through communication, Ref Freq Src of DRV-07 must be set to 'Fieldbus'.	RYD RYE
RWw2	Command code	Set the command code for execution of read/ write/ error history/ error reset, etc. of parameter. The corresponding process to command code (RWw2) is executed by switching On command code execution request flag (RYF) after completion of command code (RWw2) setting. Command code execution completion flag (RXF) switches On after completion of command execution. When command code is Write, the data of Write set in RWw3.	RYF
RWw3 Write data		Command code execution request flag (RYF) switches On after setting of Write data and command code.	
LSis			

Remote Register	Name	Description	Request for Execution
RWw4	System		
	reserved		
DW/w6	System		
RWWO	reserved		
DW/w6	System		
RWWO	reserved		
D\/\7	System		
KVVW/	reserved		

1) Command codes are in two categories: Read and Write.

For read command code, set the inverter address to RWw2.

To run write commands, set the most significant bit(MSB) of the inverter address, and assign it to RWw2. Then, input the data to be written at RWw3.

For example, to read the value set for DRV-03 Acc Time through a command code, input 0x1103 at RWw2. Then, to set DRV-03 Acc Time to 50.0 seconds using a command code, input 0x9103 (the MSB is set) at RWw2, and then input 500 at RWw3.

2) In order to prevent conflict with the RXY commands, the inverter address and frequency setting do not work in write command.

0x0005(0x8005): operation frequency

0x0006(0x0006): operation command

0x0381(0x8381): operation frequency

0x0382(0x8382): operation command

0x1101(0x9101): operation frequency

### The setting value of COM-11 Opt Parameter2 is '1'(Profile2)

When set to Profile2, the commands of Rx and Ry are ignored.

The RWw value is mapped to the address written to the inverter Para Control, and its value is output. Profile2 is for users who are not familiar with CC-Link/IE communication.

**LS** 15 | 23

Г

For example, if the value of Para Control-1 is 0x1103, if RWw0 is '100', then '100' is written to 0x1103

Remote Register	Name	Description	Request for execution
DW/w/0	Write data	Write the data to the address set in	
R W WU	write uata	Para Control-1	
D\//w/1	Write data	Write the data to the address set in	
KWWI	write uata	Para Control-2	
D\//w/2	Write data	Write the data to the address set in	
	white data	Para Control-3	
RWw3 Write	Write data	Write the data to the address set in	
	write data	Para Control4	
	Write data	Write the data to the address set in	
	Write data	Para Control-5	
D\//\w/5	Write data	Write the data to the address set in	
	write data	Para Control-6	
DW/w6	Write data	Write the data to the address set in	
R W WO	write data	Para Control-7	
D\\/\w7	Write data	Write the data to the address set in	
RWW/	write data	Para Control-8	

#### (Inverter to Master) Request Remote Description for Name register execution Monitor value specified to the upper Byte of RWr0 RWw0 of monitor code is set in RWr0 and Monitor data RYC Monitoring (RXC) switches On. Output RWr1 RYD RYE frequency When Command code (RWw2) and Write data (RWw3) is normal, 0x00 is set in reply RWr2 **Reply code** code (RWr2). If not, the value from 0x01 to RYF 0x03 is set in replay code. When command code (RWw2) is Read, the RWr3 **Read data** corresponding read data is set. System RWr4 reservation System RWr5 reservation System RWr6 reservation System RWr7 reservation

### The setting value of COM-11 Opt Parameter2 is '1'(Profile2)

When set to Profile2, the commands of Rx and Ry are ignored. The RWr value is mapped to the address written to the inverter Para Status.

Profile2 is for users who are not familiar with CC-Link/IE communication.

For example, the value of Para Status-1 is 0x1103. The value RWr0 reflects the value referenced by 0x1103.

LSis 25

I

Γ

Remote Register	Name	Description	Request for execution
RWr0	Read data	Read the data to the address set in Para Status-1	
RWr1	Read data	Read the data to the address set in Para Status-2	
RWr2	Read data	Read the data to the address set in Para Status-3	
RWr3	Read data	Read the data to the address set in Para Status-4	
RWr4	Read data	Read the data to the address set in Para Status-5	
RWr5	Read data	Read the data to the address set in Para Status-6	
RWr6	Read data	Read the data to the address set in Para Status-7	
RWr7	Read data	Read the data to the address set in Para Status-8	

### 9.5 Monitor code

Instance ID	Obje	ct Name	Unit		
Instance ID	Upper 1Byte	Lower 1Byte	Unit		
0x00	Not monitor		0.01 Hz		
0x01	Output frequen	су	0.01 Hz		
0x02	Output current		0.01 A		
0x03	Output voltage		1V		
0x04	N/A				
0x05	Preset frequen	су	0.01Hz		
0x06	Run speed		1 rpm		
0x07	Motor output to	orque	0.1%		
0x08	DC Link voltage	е	1 V		
0x09~0x0D	N/A				
0x0E	Output electric	power	0.1kW		
0x0F	Status of input	terminal	Note1)		
0x10	Status of outpu	t terminal	Note2)		
0x11~0x15	N/A				
0x16	Run status of ir	nverter	Note3)		
0x17	Run time of inv	erter	Hour		

### Note1) Bit information of input terminal

RWr3

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
-	-	_	_	-	P11	P10	P9	P8	Ρ7	P6	P5	P4	P3	P2	P1

When status of each input terminal is turned On, the value is 1. When status of each input terminal is turned Off, the value is 0.

**LS** 15 | 27

٦

### Note2) Bit information of output terminal

RWr3

1

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
-	-	-	-	-	-	-	-	-	-	Q4	Q3	Q2	Q1	R2	R1

When status of each output terminal is turned On, the value is 1. When status of each output terminal is turned Off, the value is 0. R1 means Relay1 and R2 means Relay2.

Note3) Bit information of inverter run status

B15	0 : Normal status					
B14	4 : Warning occurrence					
B13	8 : Fault occurrence					
B12	(It operates according to the value of PRT-30 Trip Out Mode.)					
B11						
B10						
B9	-					
B8						
B7	1 : Speed Searching 2 : Accelerating					
B6	3 : Constant speed 4 : Decelerating					
B5	5 : Deceleration to stop 6 : H/W OCS					
B4	7 : S/W OCS 8 : Dwell operation					
B3	0 : Stop					
B2	1 : Forward running					
B1	2 : Reverse running					
B0	3 : DC operation (Zero speed control)					

#### 9.6 Error Codes

The table below lists the error codes that are set response of monitoring and command codes to RWr2.

Error code	Description	Cause of error
0x00	Normal	A command code received from the master PLC has been correctly executed.
0x01	Write mode error	An unapproved value was written in the monitor code (RWw0) or in the command code (RWw2) register.
0x02	Invalid command error	Invalid address input at COM 31-37, Status1-8 or COM 51-58, Control1-8.
0x03	Write data range error	Write values outside of the approved range were used.
0x04	Write-protected area error	An attempt to write to a write-protected area was made.

### 10.CSP +

LSIS provides the \*CSP+ information for your convenience.

\*CSP+ is the XML file for connection information of CC-LINK IE Field(spec, input/output, parameter etc.).

Please refer the Mitsubishi GX works2 manual for how to use CSP +.

\*CSP+ can be downloaded from LSIS homepage.(http://www.lsis.com)

LS15 | 29

제품을 사용하기 전에 먼저 저희 CC-Link IE Field 옵션보드를 사용하여 주셔서 감사합니다. 안전상의 주의사항

- 안전상의 주의사항은 사고나 위험을 사전에 예방하여 제품을 안전하고 올바르게 사용하기 위한 것이므로 반드시 지켜주십시오.
   주의사항은 '경고'와 '주의'의 두 가지로 구분되어 있으며 '경고'와 '주의'의 의미는 다음과 같습니다.
   결고 지시사항을 위반할 때 심각한 상해나 사망이 발생할 가능 성이 있는 경우
- ●제품과 사용설명서에 표시된 그림기호의 의미는 다음과 같습니다.

∕!∕ 는 위험이 발생할 우려가 있으므로 주의하라는 기호입니다.

/ 는 감전의 가능성이 있으므로 주의하라는 기호입니다.

- 사용설명서를 읽고 난 후 사용하는 사람이 언제라도 볼 수 있는 장소에 보관 하십 시오.
- SV-iS7 시리즈 인버터의 기능을 충분하고 안전하게 사용하기 위하여 이 사용 설명서를 잘 읽어 보십시오.



LSIS 1

통신불량 및 고장의 원인이 됩니다.

파라미터를 설정할 때는 파라미터 Unit 을 확인하시기 바랍니다.
 통신불량의 원인이 됩니다.

### 소 개

IS7 CC-Link IE Field 통신 카드는 CC-Link IE Field Network에서 CC-Link IE Field 마스터가 인버터를 운전, 정지시키고 인버터의 상태를 모니터링을 가능하게 해주는 통신 카드입니다. IS7 CC-Link IE Field는 1Gbps 이더넷 기반의 네트워크로 기존 CC-Link와는 혼용할 수 없습니다.

### 1. CC-Link IE Field 통신 카드 Technical Data

항 목	설명						
형식	인버터 플러그인 옵션, RJ4	인버터 플러그인 옵션, RJ45 컨넥터 연결 방식					
전력 공급	인버터로부터 공급						
전송 속도	1 Gbps						
통신 방식	Token passing						
치미 여겨 미스	120대. 이종간 연결 가능	(대용량의 기기와 혼용할	날 경우 접속[	대수는 감소			
죄대 연결 대구	함.)						
최대 연결 거리	100m						
최대 연결 브랜치	제한 없음						
토폴로지	라인, 스타, 링 또는 스타와 라인의 혼용						
여겨 레이브	이더넷 케이블 (IEEE 802.3 1000BASE-T compliant cable 또는 ANSI/TIA/EIA-						
연결 게이들	568-B(Category 5e) compliant shielded 4-pair branched cable) 사용						
커넥터	Shielded RJ-45						
	Intelligent device station	Maximum cycle size	RX	32 bit			
		(한 노드당)	RY	32 bit			
노드 형식			RWr	8 word			
			RWw	8 word			
		Transient transmission	Not availab	е			

### 2. 제품 구성물

iS7 CC-Link IE Field 통신 카드 1개, 스크류 2개, 본 사용설명서로 구성되어 있습니다.

LSis 3

### 3. iS7 CC-Link IE Field 외관 및 설치

(1) 외관



(2) 내부



4 | **LS**IS

### (3) iS7 인버터에 통신 카드 체결



LSIS 5

### 4. Network 연결

Pin No.	신호	설명	선 색
1	TX/RX+	송수신 데이터 Plus	흰/황색
2	TX/RX-	송수신 데이터 Minus	황색
3	TX/RX+	송수신 데이터 Plus	흰/녹색
4	TX/RX-	송수신 데이터 Minus	청색
5	TX/RX+	송수신 데이터 Plus	흰/청색
6	TX/RX-	송수신 데이터 Minus	녹색
7	TX/RX+	송수신 데이터 Plus	흰/갈색
8	TX/RX-	송수신 데이터 Minus	갈색

(1) 통신선 연결 단자 관련 정보

(2) 통신선 연결 단자 부



\*\* 1번과 2번 핀등 모든 pair에 연결된 선은 반드시 서로 꼬여 있어야 합니다. \*\* 3번과 6번 핀에 연결된 선도 반드시 서로 꼬여 있어야 합니다

CC-Link IE Field 통신 옵션 최대 전송 지연 시간

PLC(Master)로부터 수신된 CC-Link IE Field 통신 데이터를 옵션 카드 내부적으로 연산 처리한 후 PLC로 송신하기까지의 Profile별 최대 전송 지연 시간은 하기와 같 습니다. 하기 명기된 최대 전송 지연 시간 이하로 PLC(Master)통신 주기 설정 시 정확한 CC-Link IE Field 통신 동작을 보장 할 수 없습니다. PLC(Master) 통신 설정 시 참조 하십시오.

Mode CC-Link IE Field 통신 옵션 최대 전송

6 | **LS** is



**메모 [노태희1]:** 추가\_131217

(3) 사용 주파수 대역

네트워크 케이블은 일반적으로 UTP, STP등으로 구분되며 사용주파수에 따라 여러 가지 카테고리로 분류됩니다. CC-LINK IE Field 통신 옵션을 사용하기 위해서는 STP(일반적으로 카테고리 6a 이상)의 케이블이 권장됩니다.

(4) Twist Pair 선 종류



분류	상세	용도	
		최대 200MHz	
UIP (U.UIP)	비자폐 고속신호용 케이클	음성+정보(Data)+저급영상 신호	
	1중 차폐로, 케이블 코어만	최대100MHz	
FTP (S.UTP)	차폐된 케이블	전자장애(EMI) 및 전기적 안정화 고려	
	*차폐재질: AL/Plastic complex foil 또는 동편조(Copper Braid)	음성+정보(Data)+저급 영상 (Video)신호	

### LSIS 17

STP (S.STP)	2중 차폐로, Pair 차폐 및 케이블 코어 차폐된 케이블 *페어(Pair)차폐재질: AL/Plastic complex foil *코어차폐재질: AL/Plastic complex foil 또는 동편조(Copper Braid)	최대 500MHz 음성+정보(Data)+영상(Video) 신호 75Ω 동축케이블 대체용
-------------	---	--

(5) 네트워크 연결 방법



\*CC-LINK IE Field 옵션은 LINK1 와 LINK2의 방향을 구분하지 않습니다.

네트워크 타입	구성 방법
Star topology	

# 8 | **LS**IS



### 5. LED 표시

CC-Link IE Field 통신 카드에 있는 4개의 녹색 & 붉은색 LED 를 이용해서 현재 CC-Link IE Field 통신 카드 상태를 표시합니다. CC-Link IE Field 통신 카드에 아 래의 순서로 LED가 정렬되어 있습니다.



LED 이름	색	기능				
		ON - 정상 동작, 인버터와 통신이 정상적으로 이루어지고 있				
		00				
RUN	Green	200ms 주기 점멸 - 인버터와 통신이 이루어지지 않고 있음				
		OFF - 인버터 커넥터와의 연결 문제 또는 옵션 하드웨어				
		failure				
65		ON - 데이터 송신 중				
SD Green OFF - 데이터 송신 대기 중						
	Ded	ON - 데이터 수신 중				
RD	кеа	OFF - 데이터 수신 대기 중				
	Green	ON - Cyclic 데이터 송신 중				
DLINK		OFF - Cyclic 데이터 송신 대기 중 또는 연결 종료				

**LS**15 | 9

	Red	<b>ON - PLC</b> 와 통신이 해지됨 또는 Lost command 에러
EKK		OFF - 정상 동작 중
	Ded	ON - 수신 데이터 에러 또는 링크 에러
LEKK	кеа	OFF - 정상 동작 중

### 6. Trouble Shooting

	L	ED 표시		9101	대채		
RUN	SD/RD	DLINK/ERR	LERR	면언	내쪽		
				통신카드에 전원이	통신 카드가 인버터에		
				공급이 되고 있지	제대로 장착이 되었는지		
OFF	무관	무관	무관	않음.	확인한다.		
					인버터 전원을 ON 했는지		
					확인한다.		
				통신카드와 인버터	통신선과 인버터 Power		
200m				Interface통신이상	선이 분리 되어 있는지		
주기	무관	무관	무관		확인 합니다.		
점멸					인버터 전원을 OFF 후		
					다시 ON 합니다.		
				PLC와 통신이	통신선과 인버터 Power		
				되고 있지 않음	선이 분리 되어 있는지		
무관	무관	RED ON	무관		확인 합니다.		
					PLC가 정상 동작 중 인지		
					확인 합니다.		
				통신이 되고 있지	통신 케이블이 제대로		
				않음.	연결되어 있는지 확인		
무관	무관	무관		주변 통신 노드가	합니다.		
			UN	동작되고 있지	연결된 네트워크 노드의		
				않음	상태를 확인 합니다.		

10 **LS**is

### 7. Quick Communication Start

인버터 전원이 Off인 상태에서 CC-Link IE Field 통신 카드를 장착한 후 인버터 전원을 On 한 후 CNF-30 파라미터가 "CC-Link IE Field"인지 확인을 합니다. (1) CC-Link IE Field 통신 카드에 통신 Cable을 연결해서 Network에 접속합 니다.

- (2) COM-10 Opt Parameter1 파라미터에서 Network ID를 설정합니다.
- (3) COM-11 Opt Parameter2 파라미터에서 Station ID를 설정합니다.
- (4) COM-94 Comm Update Yes를 설정합니다.
- (5) CC-Link IE Field 통신 카드의 RUN LED에 불이 켜지는지 확인 합니다. CC Link의 RUN LED에 불이 켜지지 않으면 COM-10, COM-11의 Keypad 파라미터 설정 값이 정확한지 다시 확인 하십시오.

Code	파라미터 이름	초기값	Range
CNF-30	Option-1 Type	-	-
DRV-06	Cmd Source	Fx/Rx-1	Keypad
			Fx/Rx-1
			Fx/Rx-2
			Int. 485
			FieldBus
			PLC
DRV-07	Freq Ref Src	Keypad-1	Keypad-1
			Keypad-2
			V1
			I1
			V2
			I2
			Int. 485
			Encoder
			FieldBus
			PLC
PRT-12	Lost Cmd Mode	None	None
			FreeRun
			Dec
			Hold Input
			Hold Output
			Lost Preset
PRT-13	Lost Cmd Time	1.0sec	0.1~120.0sec
PRT-14	Lost Preset F	0.00Hz	0.00~400.00Hz
COM-06	FBus S/W Ver	-	-
COM-09	FBus LED	-	-

# 8. CC-Link IE Field 관련 Keypad 파라미터

COM-10	Opt Parameter1	1	1~239 Network ID
COM-11	Opt Parameter2	1	1~120 Station ID
COM-12	Opt Parameter3	0	0 (Profile1) 1 (Profile2)
COM-31	Para Status-1	-	0x0000
~COM-38	~ Para Status-8		~0xFFFF
COM-51	Para Control-1	-	0x0000
~COM-58	~ Para Control-8		~0xFFFF
COM-94	Comm Update	No	No
			Yes

#### (1) Option-1 Type (CNF-30) - 인버터에 장착된 통신 카드 이름 표시

- ✔ 인버터에 장착된 통신 카드 이름을 표시 합니다.
- ✓ CC-Link IE Field 통신 카드가 제대로 장착이 되고 CC-Link IE Field 통신 카드에 문제가
  - 없으면 "CC-Link IE Field"라고 표시 됩니다

#### (2) Cmd Source (DRV-06) - 인버터 운전 지령 소스 설정

- ✔ 인버터의 운전 지령 소스를 설정 합니다.
- ✔ CC-Link IE Field 통신으로 인버터를 운전/정지 지령을 하고자 할 경우 "Fieldbus"
  - 로 설정 해야 합니다.

### (3) Freq Ref Src (DRV-07) - 인버터 주파수 지령 소스 설정

- ✔ 인버터의 주파수 지령 소스를 설정 합니다.
- ✓ CC-Link IE Field 통신으로 인버터의 지령 주파수를 설정하고 싶은 경우 "Fieldbus
  - 로 설정 해야 합니다.

### (4) Lost Cmd Mode (PRT-12) - 통시 지령 상실 시 운전 방법

✔ PRT-12 Lost Cmd Mode는 PRT-13 Lost Cmd Time 시간 동안 통신 지령

**LS***i***s** | 13

상실이 발생해서 통신 지령 상실로 인식 했을 때 운전 방법을 설정합니다. 됩니다.

None : Inverter가 Lost Command 상태가 되어도 아무런 조치를 하지 않음 FreeRun : Lost Command 상태가 되면 FreeRun정지를 하게 되고 Trip 발생 Dec : Lost Command 상태가 되면 모터는 감속 정지를 하게 되고 Lost Command Trip 발생 Hold Input : 마지막으로 들어온 속도지령으로 운전하면서 Lost Command Warning 발생 Lost Preset : PRT-14에 설정한 운전 속도로 운전하면서 Lost Command Warning 발생

#### (5) Lost Preset F (PRT-14) - Lost Preset 설정 주파수

✓ PRT-12 Lost Cmd Mode를 Lost Preset으로 설정 한 경우 통신 지령 상실 발생 시 Lost Preset F로 설정한 주파수로 운전하게 됩니다.

#### (6) Lost Cmd Time (PRT-13) - 통시 지령 상실 판정 시간

- ✓ PRT-13 Lost Cmd Time에 설정된 시간 동안 계속 통신 지령 상실이 발생 을 하면 통신 지령 상실로 인식을 합니다.
- ✓ PRT-13 Lost Cmd Time 시간 이내에 통신이 다시 재개가 되어 정상 상태 로 복구가 되면 에러로 인식을 하지 않습니다.



- (7) FBus S/W Ver (COM-06) 인버터에 장착된 통신 카드 버전 표시
  - ✔ 인버터에 장착된 통신 카드의 버전을 표시합니다.
- (8) FBus LED (COM-09) 통신 카드 LED의 ON, OFF표시

✔ CC-Link IE Field 통신 카드의 상태 정보를 표시합니다.

 ✓ Keypad로 COM-9 FBus LED를 보면 4개의 LED가 보입니다. 4개 중 3개의 LED가 CC-Link IE Field 통신 카드의 상태 정보를 표시합니다. COM-09의 LED 순서에 따라 (오른쪽 -> 왼쪽) RUN, SD/RD, DLNK/ERR, LERR 정보 를 표시 해 줍니다.

비트	내용	상태
0	RUN LED	정상적일 때 ON
1	SD/RD LED	송 수신 시 <b>ON</b>
2	DLNK/ERR	정상적일 때 ON, 에러 발생 시 점멸
3	LERR	에러 발생 시 ON

COM-09 LED 상태 예)



RUN LED	SD/RD	DLNK/ERR	LERR
ON	ON	OFF	ON

### (9) Opt Parameter1 (COM-10) - Network ID 설정

✔ CC-Link IE Field의 network 단위의 ID를 설정 합니다.

✓ 물리적으로 연결된 통신 기기는 동일한 네트워크 ID를 사용해야 합니다. Network ID를 변경하고 반드시 Comm Update를 Yes로 설정해야 변경된 Network ID가 통신 카드에 반영이 됩니다.

### (10) Opt Parameter2(COM-11) - Station Number 설정

- ✓ CC-Link IE Field의 Station ID값을 설정하는 파라미터 입니다. Station
   Number는 1~120까지 설정 가능 합니다.
- ✓ Station ID는 중복 설정 할 수 없습니다. 설정하는 Station ID값이 다른 Station ID로 설정 되어 있지 않은지 확인하여 주십시오.
- ✓ Station Number를 변경하고 반드시 Comm Update를 Yes로 설정해야 변 경된 Station ID 값이 CC-Link IE Field 통신 카드에 반영이 됩니다.

LSIS | 15

★★★ 주의 사항 Network 연결 예)



✔ 한 Network에서 Station Number를 중복되게 설정 하시 마십시오.

✓ Network에서 Station Number 설정 시 Station Number가 연속 되도록 설정하십시오. (예) Station이 3개인 경우 Station 1, station 2, station 4와 같이 설정하지 마십시오.

### (11) Opt Parameter3 (COM-12) - Profile 설정

- ✓ LS산전에서는 2개의 Profile을 제공합니다.
- ✓ Profile2로 설정 시 Profile1보다 높은 응답성을 제공 해 줍니다.

### (12) Para Status-1~8 (COM-31~38)

- ✓ COM-11 Opt Parameter2의 설정값이 1(Profile2) 일 때만 보입니다.
- ✓ Para Status-1~8은 리모트 레지스터의 명령 코드(RWr0~7)의 Read 수행 시 Read를 할 인버터 주소를 설정하는 파라미터입니다.
- ✓ 예를 들어 Para Status-1이 0x0003로 설정이 되었다면 RWr0를 읽을 때 인버터의 0x0003주소에 저장된 값을 읽어오게 됩니다.

### (13) Para Control1~8 (COM-51~58)

- ✓ COM-11 Opt Parameter2의 설정값이 1(Profile2) 일 때만 보입니다.
- ✓ Para Control-1~8은 리모트 레지스터의 명령 코드(RWw0~7)의 Write 수 행 시 Write를 할 인버터 주소를 설정하는 파라미터입니다.

16 **LS**15

✓ 예를 들어 Para Control-1이 0x1004로 설정되어 있다면 RWw0에 값을 쓰 면 인버터의 0x1004 주소에 값이 전달 됩니다.

### (14) Comm Update (COM-94)

- ✓ COM-07 FBus ID와 COM-10 Opt Parameter1 값을 변경하고 반드시 Comm Update를 Yes로 설정해야 합니다.
- ✓ Comm Update를 해야 변경된 Station ID와 Network ID가 CC-Link IE Field 통신 카드에 반영이 됩니다.

### 9. CC-Link IE Field 데이터 일람

여기서는 마스터와 인버터의 입출력 데이터 정보를 나타냅니다. 9.1 리모트 I/O

리모트 출력		리모트 입력	
01:	스터 -> 인버터	인버터 <b>-&gt;</b> 마스터	
디바이스	시중 며치	디바이스	시층 며치
No	신오 경정	No	신오 경영
RY0	정 방향 운전 지령	RX0	정 방향 운전 중
RY1	역 방향 운전 지령	RX1	역 방향 운전 중
		RX2	가속 중
	미사용	RX3	감속 중
		RX4	속도 도달
RY2~8		RX5	DC Braking ਨ
		RX6	미사용
		RX7	Relay1 출력 단자
		RX8	Relay2 출력 단자
RY9	인버터 출력 차단	RX9	Q1 출력 단자
DVA	미사용	RXA	미사용
KTA~B		RXB	미사용
RYC	모니터 지령	RXC	모니터 중
DVD	주파수 설정 지령1	DYD	주파수 설정 완료1
RTD	(RAM)	KXD	(RAM)

**LS**IS | 17

Г

RYE	주파수 설정 지령2 (EEPROM)	RXE	주파수 설정 완료2
RYF	명령코드 실행 요구	RXF	명령 코드 실행 완료 (EEPROM)
RY10~19	미사용	RX10~19	미사용
RY1A	에러 Reset	RX1A	Trip 상태
RY1B	미사용	RX1B	운전 가능 상태
RY1C~1F	시스템 예약	RX1C~1F	시스템 예약

### 9.2 리모트 출력

	리모트 출력(Master -> 인버터)			
디바이	신호 명칭	Li B		
스 No				
BVO	저 바햐 으저 지려	ON 정 방향 운전 지령		
RIU		OFF 정지 지령		
DV1	여 바찮 으저 지경	ON 역 방향 운전 지령		
RTI	즉 경영 군선 지경	OFF 정지 지령		
RY2~	미사용			
8				
RY9	인버터 출력 차단	ON 일 때 모터를 FreeRun 정지 합니다.		
RYA~	NUR			
В				
		ON 일 때 모니터 코드(RWw0)에 해당하는 모		
DVC		니터 데이터 값이 RWr0에 저장됩니다. RXC(모		
RIC	오니더 시장	니터 중)가 ON됩니다.		
		Profile 1일 경우에만 동작		
		주파수 설정 지령1(RYD)을 ON으로 설정하면		
	ㅈ피ㅅ 서저 피러 <b>1</b>	지령 주파수(RWw1)가 인버터로 입력이 됩니		
RYD	구파구 결경 시영I	다. 지령 주파수가 인버터에 반영이 되면 주파		
	(RAM)	수 설정 완료1(RXD)이 ON됩니다.		
		Profile 1일 경우에만 동작		
	지피스 서저 피려 <b>기</b>	주파수 설정 지령2(RYE)를 ON으로 설정 하면		
RYE		지령 주파수(RWw1)가 인버터로 입력이 됩니		
	(RAM, EEPKUM)	다. 지령 주파수가 인버터에 반영이 되면 주파		

18 **LS**is

		수 설정 완료2(RXE)가 ON됩니다.
		여기서 설정한 지령 주파수는 인버터 전원이
		OFF 후 다시 ON을 해도 이전 지령 주파수가
		기억이 됩니다.
		Profile 1일 경우에만 동작
		명령 코드(RWw2) 시행을 요구 합니다.
DVE	며려ㅋ드 시해 이기	명령 코드가 Write 요구 인 경우 RWw3의 데이
КТГ	RYF 영영고드 설행 보구	터 값이 유효 합니다.
		Profile 1일 경우에만 동작
RY10	៣រុរទ	
~19		
		인버터가 Trip이 발생한 경우 Trip 발생 원인을
RY1A	인버터 Trip Reset	제거 한 후 RY1A를 ON을 하면 인버터의 Trip
		상태를 해제합니다.
RY1B	미사용	
RY1C	시스테 에야	
~1F	시스럽 예약	

### 9.3 리모트 입력

	리모트	입력(인버터 → Master)
디바이	시중명칭	।॥ <u>छ</u>
스 No	2200	4 8
DYO	저 바햐 우저 주	ON 정 방향 운전 중
ЛЛU		OFF 정 방향 운전 중 이외
DV1	여 바햐 으저 주	ON 역 방향 운전 중
KA1	역 방양 순신 궁	OFF 역 방향 운전 중 이외
RX2	가속 중	ON 일 때 가속 중
RX3	감속 중	ON 일 때 감속 중
RX4	속도 도달	ON 일 때 속도 도달
RX5	미사용	
RX6	미사용	
RX7	Relay1 출력 단자	ON 일 때 단자 출력
RX8	Relay2 출력 단자	ON 일 때 단자 출력
RX9	Q1 출력 단자	ON 일 때 단자 출력

**LS**15 | 19

RXA	미사용	
RXB	미사용	
RXC	모니터 중	모니터 데이터가 갱신 중일 때 ON됩니다. 모니터 지령(RYC)이 ON이면 모니터 코드 RWw0에 해당하는 모니터 데이터를 RWr0에 저장을 하고 모니터 중(RXC)이 ON됩니다. 모니터 지령(RYC)이 OFF이면 모니터 중(RXC)이 OFF됩니다. Profile 1일 경우에만 동작
RXD	주파수 설정 완료1 (RAM)	주파수 설정 지령1(RYD)을 ON으로 설정해서 지령 주파수가 인버터에 반영이 되면 주파수 지 령 완료1(RXD)이 ON됩니다. Profile 1일 경우에만 동작
RXE	주파수 설정 완료 <b>2</b> (EEPROM)	주파수 설정 지령2(RYE)를 ON으로 설정해서 지령 주파수가 인버터에 반영이 되면 주파수 지 령 완료 2(RXD)가 ON됩니다. Profile 1일 경우에만 동작
RXF	명령 코드 실행 완료	명령코드 실행 요구(RYF)가 ON이면 명령코드 RWw2에 해당하는 명령 코드가 처리가 실행됩니다. 명령 코드 실행 완료 후 명령코드 실행 완료 RXF가 ON됩니다. 명령 코드 실행 시 에러가 발생하면 응답 코드 RWr2가 O이외의 값이 됩니다. Profile 1일 경우에만 동작
RX10 ~19	미사용	
RX1A	Trip 상태	인버터에 Trip이 발생한 경우에 ON합니다.
RX1B	운전 가능 상태	인버터가 운전 가능한 상태일 때에 ON합니다. 인버터가 운전 가능한 상태는 인버터 전원이 안 정 되고 인버터 Trip 등이 발생 하지 않은 상태 를 말합니다.
RX1C ~1F	시스템 예약	

20 **LS**is

9.4 리모트 레지스터

(마스터-> 인버터)

# COM-11 Opt Parameter2의 설정값이 0(Profile1) 일 경우

리모트 레지스터	명칭	내 용	실행 요구
RWw0	모니터 코드	모니터 코드(RWw0)를 설정합니다. 모니터 코드(RWw0)를 설정 후, 모니터 지 령 플래그(RYC)를 ON으로 설정하면 모니터 코드에 대응하는 모니터 데이터가 RWr0 에 저장 되고 모니터 중(RXC)이 ON됩니다.	RYC
RWw1	지령 주파수 (0.01 Hz Scale)	지령 주파수를 설정합니다. 이 때, RYD(주파 수 설정 지령1) 플래그를 ON하면, 이 지령 데이터가 RAM상에 저장이 됩니다. RYE(주파 수 설정 지령 2)를 ON하면, 지령 주파수 값 이 EEPROM에 저장 하여 인버터 전원을 OFF 후 다시 ON을 해도 이전의 주파수가 기억이 됩니다. 통신으로 주파수 지령을 내리려면 DRV-07 Ref Freq Src를 "Fieldbus"로 설정이 되어야 합니다.	RYD RYE
RWw2	<sup>1),2)</sup> 명령 코드	파라미터의 읽기, 쓰기, 이상 이력, 에러 Reset 등을 실행 하기 위한 명령 코드를 설 정합니다. 명령 코드(RWw2)를 설정 하고 명령 코드 실행 요구 플래그(RYF)를 ON으로 설정 하면 인버터는 명령 코드(RWw2)에 대 응하는 처리를 행한 후 명령 코드 실행 완료 플래그(RXF)를 ON합니다. 명령 코드가 Write 인 경우 RWw3에 쓰기 데이터 값을 설정 합니다. 명령코드와 쓰기 데이터를 설정 후, 명령 코	RYF
RWw3	쓰기 데이터	'영영고드와 쓰기 데이터를 실정 우, 영령 코 드 실행 요구 플래그(RYF)를 ON으로 설정 해야 합니다.	
RWw4	시스템 예약		
RWw5	시스템 예약		

**LS**15 | 21

RWw6	시스템 예약	
RWw7	시스템 예약	

1) 명령 코드는 크게 2가지로 분류 가능 합니다. 읽기 명령 코드의 경우 RWw2에 인버터 통신 주소를 입력 해서 사용하십시오. 쓰기 명령 코드 수행 시 인버터 통신 주소의 최상위 Bit을 Set한 값을 RWw2에 입력 하고 RWw3에 데이터 값을 입력해서 Write 수행이 가능 해 집니다.

Ex)

DRV-03 Acc Time을 명령 코드를 통해 읽고 싶은 경우 RWw2에 0x1103을 입력하면 됩니다.

DRV-03 Acc Time을 명령 코드를 통해 50.0초를 쓰고 싶은 경우 RWw2에 0x9103(최 상위 Bit를 Set)을 입력하고 RWw3에 500을 입력 하면 됩니다

2) RXY 명령과의 충돌을 막기 위해 인버터 동작 주소 및 주파수 설정 주소는 명령어 코드 쓰기는 동작하지 않습니다.

0x0005(0x8005): operation frequency 0x0006(0x0006): operation command 0x0381(0x8381): operation frequency 0x0382(0x8382): operation command 0x1101(0x9101): operation frequency

#### COM-11 Opt Parameter2의 설정 값이 1(Profile2) 일 경우

Profile2일 경우 Rx 및 Ry명령은 무시 됩니다. 인버터의 Para Control에 쓰여진 주소에 RWw 값이 매핑 되어 출력 됩니다. Profile2는 CC-Link가 익숙하지 않은 사용자를 위해 제공하는 프로파일입니다.

Ex) Para Control-1에 0x1103일 경우 RWw0가 100이면 0x1103에 100이 출력

리모트 레지스터	명칭	내 용	실행 요구
RWw0	쓰기 데이터	Para Control-1에 설정된 주소로 데이터를 쓴다.	
RWw1	쓰기 데이터	Para Control-2에 설정된 주소로 데이터를 쓴다.	

RWw2	쓰기 데이터	Para Control-3에 설정된 주소로 데이터를
D\4/14/2	쓰기 데이터	Para Control-4에 설정된 주소로 데이터를
KWW5	쓰기 네이더	쓴다.
DW/w/4	쓰기 데이터	Para Control-5에 설정된 주소로 데이터를
KWW4		쓴다.
DW	쓰기 데이터	Para Control-6에 설정된 주소로 데이터를
KWWD		쓴다.
DWG	쓰기 데이터	Para Control-7에 설정된 주소로 데이터를
KWWO		쓴다.
DW67		Para Control-8에 설정된 주소로 데이터를
KVVW/	뜨기 네이더	쓴다.

(인버터 -> 마스터)

### COM-11 Opt Parameter2의 설정값이 0(Profile1) 일 경우

리모트 레지스 터	명칭	내 용	실행 요구
RWr0	모니터 데이터	모니터 코드(RWw0의 상위 Byte)에 대응 되는 모니터 데이터가 RWr0에 저장이 되 고 모니터 중(RXC)이 ON됩니다.	RYC
RWr1	출력 주파수		RYD
			RYE
RWr2	응답 코드	명령 코드(RWw2)와 쓰기 데이터(RWw3) 가 정상적인 경우는 응답 코드(RWr2)에 0x00이 설정 되고 오류가 있는 경우에는 0x01~0x04의 값이 설정됩니다.	RYF
RWr3	읽기 데이터	명령 코드(RWw2)가 Read 인 경우 이에 대응하는 읽기 데이터가 설정됩니다.	
RWr4	시스템 예약		
RWr5	시스템 예약		
RWr6	시스템 예약		
RWr7	시스템 예약		

### COM-11 Opt Parameter2의 설정 값이 1(Profile2) 일 경우

Profile2일 경우 Rx 및 Ry명령은 무시 됩니다. 인버터의 Para Status에 쓰여진 주소에 해당하는 값이 RWr에 매핑됩니다. Profile2는 CC-Link가 익숙하지 않은 사용자를 위해 제공하는 프로파일입니다.

Ex) Para Status-1에 0x1103이면 RWr0에 0x1103가 참조하는 값이 반영됨

리모트 레지스터	명칭	내 용	실행 요구
RWr0	읽기 데이터	Para Status-1에 설정된 주소의 데이터가 기록 된다.	
RWr1	읽기 데이터	Para Status-2에 설정된 주소의 데이터가 기록 된다.	
RWr2	읽기 데이터	Para Status-3에 설정된 주소의 데이터가 기록 된다.	

D\4/2	סו דו רוו חו בו	Para Status-4에 설정된 주소의 데이터가
RVVI 3	러기 네이니	기록 된다.
D\4/#4	סו דו רוו סו בו	Para Status-5에 설정된 주소의 데이터가
RWr4	읽기 네이터	기록 된다.
DW/ E	읽기 데이터	Para Status-6에 설정된 주소의 데이터가
RWIS		기록 된다.
DW/#C	읽기 데이터	Para Status-7에 설정된 주소의 데이터가
RWID		기록 된다.
RWr7	סו דו רוו מו בו	Para Status-8에 설정된 주소의 데이터가
	ᆰ기 네이더	기록 된다.

**LS**15 | 25

### 9.5 모니터 코드

Г

.

Instance ID	Objec	t Name	гго	
Instance ID	상위 <b>1Byte</b>	하위 1B	yte	27
0x00	모니터 안 함			-
0x01	출력 주파수			0.01 Hz
0x02	출력 전류			0.01 A
0x03	출력 전압			1V
0x04	지원 안 함			
0x05	설정 주파수			0.01Hz
0x06	운전 속도			1 rpm
0x07	모터 출력 토크			0.1%
0x08	DC Link 전압			1 V
0x09~0x0C	지원 안 함			
0x0D	지원 안 함			0.1kW
0x0E	출력 전력			0.1kW
0x0F	입력 단자 상태			주1)
0x10	출력 단자 상태			주2)
0x11~0x15	지원 안 함			
0x16	인버터 운전 상	·Ell		주3)
0x17	인버터 운전 시	간		Hour

주1) 입력 단자 Bit 정보

RWr3

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	_	_	_	_	_	P11	P10	P9	P8	Ρ7	P6	P5	P4	P3	P2	P1
1	└──┴──┴──┴──┴──┴──┴──┴──┴──┴──┴──┴──┴──┴															

각 단자 입력 상태 OFF 시 :0



### 주2) 출력 단자 Bit 정보

RWr3

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
_	_	-	-	-	-	Ι	-	-	-	Q4	Q3	Q2	Q1	R2	R1

각 출력 단자 상태가 ON 이면 : 1 각 출력 단자 상태가 OFF 이면 : 0 R1, R2는 Relay1 Relay2를 의미함.

주3) 인버터 운전 상태 Bit 정보

B15	0: 정상 상태						
B14	4 : Warning 발생 상태						
B13	8 : Fault 발생 상태						
B12	(PRT-30 Trip Out Mode 설정값에 따라서 동작합니다.)						
B11							
B10							
B9	-						
B8							
B7	1: 속도 써치 중 2: 가속 중						
B6	3: 정속 중 4: 감속 중						
B5	5 : 감속 정지 중 6 : H/W OCS						
B4	7:S/W OCS 8:드웰운전 중						
B3	0: 정지						
B2	1:정방향 운전중						
B1	2: 역방향 운전중						
В0	3 : DC 운전중(0 속제어)						

**LS**15 | 27

#### 9.6 응답 코드

모니터 코드, 명령 코드에 대한 응답을 RWr2에 설정합니다.

에러 코드	내용	원인
0,00	저사	마스터가 보내온 명령 코드가 올바르고 정상적으로
0x00	60	실행 되었음을 의미합니다.
0,01		모니터 코드 RWw0, 명령코드 RWw2에 지원하지
0.001	거집 포크 에너	않는 값을 기입 했음을 의미합니다.
		COM-31~37 Status1~8 혹은 COM-51~58
0x02	명령 코드 불량	Control1~8에 엉뚱한 주소 값을 입력 했음을
		의미합니다.
0,02		쓰기 데이터 범위 미만이거나 초과인 값을 쓰려고
0x03	쓰기 데이터 임위 에너	했을 때 발생하는 에러 코드 입니다.
0.01	쓰기 금지 영역에 수기	읽기 영역에 쓰기 동작을 수행 시 알려주는 에러 코
0x04	수행 시 에러	드입니다.
0x05		미확인 에러
		인버터와 옵션 카드 상의 통신 문제시 발생합니다.

### 10. CSP +

LS 산전은 고객 편의를 위해 \*CSP+ 정보를 제공 합니다. CSP +는 CC-LINK IE Field의 접속 기기기의 정보를 나타내기 위한 XML 데이터 파일(사양, 입출력, 파라미터 정보 등)입니다.

CSP +의 사용 방법은 미쓰비씨 GX works2의 사용 설명서를 참고 바랍니다.

\*CSP+ 정보는 LS 산전 홈페이지에서 다운로드 받으실 수 있습니다.

#### I S'is

HEAD OFFICE

Address: (HoGye-Dong) 127, LS-ro, DongAn-Gu, AnYang-Si, GyeongGi-Do, Korea http://www.lsis.com

- LSIS Europe B.V >> Amsterdam, Netherland Address: 1st FL., Tupolevlaan 48, 1119NZ Schiphol-Rijk, The Nether lands Tel: 31-20-654-1420 Fax: 31-20-654-1429
- I SIS (Middle East) FZE Office >> Dubai, UAE Address: LOB 19 205, JAFZA View Tower, Jebel Ali Free Zone, Dubai United Arab Emirates Tel: 971-4-886-5360 Eax: 971-4-886-5361
- · Dalian LSIS Co., Ltd. >> Dalian, China Address: No. 15 Liaobexi 3-Road. Economic and Technical Development Zone, Dalian 116600, China Tel: 86-411-8730-7510 Fax: 86-411-8730-7560
- LSIS Wuxi Co., Ltd. >> Wuxi, China Address: No.1 Lexing Road, Wuxi National High&New Tech Industrial Development Area, Wuxi214028, Jiangsu, P.T.China Tel: 86-510-8534-6666 Fax: 86-510-522-4078
- LSIS-VINA Co., Ltd. >> Hanoi, Vietnam Address: Nouven Khe, Dong Anh, Ha Noi, Vietnam Tel: 84-4-6275-8055 Eax: 84-4-3882-0220

#### · LSIS Co., Ltd. Rep. Office >> Hochiminh, Vietnam

Address: Gema Dept Tower 18F, 6 Le Thanh Ton, District 1, HCM, Vietnam Tel: 84-8-3823-7890 Eax:

· LSIS Tokyo Office >> Tokyo, Japan

Address: Tokyo Club Building 13F, 2-6, Kasumigaseki 3-chome, Chivoda-ku Tokvo 100-0013 Tel: 81-3-6268-8241 Eav: 81-3-6268-8240

LSIS Shanghai Office>> Shanghai, China

Address: 32nd Floor, International Corporate City, No.3000 NorthZhongshan Road, Putuo District, Shanghai, China, 200063. Tel: 86-21-5237-9977 (609) Fax: 86-21-5237-7189

#### · LSIS Beijing Office >> Beijing, China

Address: Room 2306, Building B Landgent Center, No.24 Middle Road, East 3rd Ring Road, Chaoyang District, Beijing, P.R. China Tel: 86-10-5761-3127, 7 Fax: 86-10-5761-3128

· LSIS Guangzhou Office >> Guangzhou, China

Address: Room 1818-1820, Xinvuan Building, NO 898 Tianhe North Road. Tianhe District. Guangzhou, P.R. China Tel: 86-20-8326-6784 Fax: 86-20-8326-6287

#### · LSIS Chengdu Office >> Chengdu, China

Address: Room1710, 17/F Huamin Empire Plaza, NO.1 Fuxin Road, Chengdu, P.R. China Tel: 86-28-8670-3200 Fax: 86-28-8670-3203

#### LSIS Qingdao Office >> Qingdao, China

Address: Room2001, Galaxy Building, 29 ShanDong Road, ShiNan District, QingDao, ShanDong, P.R. China Tel: 86-532-8501-6058 Fax: 86-532-8501-6057

#### 신속한 서비스 접수, 든든한 기술상담

#### 고객상단세터 저국어디서나 1544-2080

본사(Drive 사업의 경기도 안양시 동안-	<b>부)</b> 구 엘에스로 127(호계동)		<ul> <li>A/S 문의 서울 고객지원팀</li> </ul>	TEL: (031)689-7112	FAX : (031)689-7113
구입 문의 서울영업 부산영업 대구영업 서부영업(광주) 서부영업(대전) 서부영업(전주) 기술문의	TEL: (02)2034-4611~18 TEL: (051)310-8855~60 TEL: (053)603-7741~7 TEL: (062)50-1885~91 TEL: (042)820-4240~42 TEL: (063)271-4012	FAX : (02)2034-4622 FAX : (051)310-6851 FAX : (053)603-7788 FAX : (062)526-3262 FAX : (042)820-4298 FAX : (063)271-2613	전안 고객지원님 부산 고객지원님 대구 고객지원팀 광주 고객지원팀 ·서비스 지정점 명산전(서울) TPI시스템(서울) 우진산전(동두천) 서역(M주운(미권)	TEL: (021)550'8308'9 TEL: (051)310-6922'3 TEL: (052)510-6922'3 TEL: (062)510-1883,92 TEL: (02)462-3053 TEL: (02)462-3053 TEL: (02)895-4803-4 TEL: (031)877-8273 TEL: (033)588-3750	FAX: (041)554-3949 FAX: (051)310-6851 FAX: (053)603-7788 FAX: (02)526-3262 FAX: (02)462-3054 FAX: (02)6264-3545 FAX: (031)878-8279 FAX: (031)588-3751
고객상담센터 동현산전(안양) 나노오토메이션(대전) 씨에스티(부산) 신광ENG(부산) 에이엔디시스템(부산)	TEL: (친극어디서니 1544-2080 TEL: (031)479-4785~6 TEL: (042)636-8015 TEL: (051)311-0337 TEL: (051)319-1051 TEL: (051)317-1237	FAX: (041)550-8600 FAX: (031)479-4784 FAX: (042)636-8016 FAX: (051)311-0338 FAX: (051)319-1052 FAX: (051)319-1052	성원에정5(인신) 신진시스템(안산) 파란자동화(천안) 태명시스템(대전) 서진산전(울산) 대명시스템(대구) 정석시스템(광주)	TEL: (031)494-9607 TEL: (041)579-8308 TEL: (042)670-7363 TEL: (052)227-0335 TEL: (053)564-4370 TEL: (052)526-4151 TEL: (052)526-2151	FAX: (02)508-9608 FAX: (041)579-8309 FAX: (042)670-7364 FAX: (052)227-0337 FAX: (053)564-4371 FAX: (062)526-4152
교육 신청 연락처 LS산전 연수원 서울 교육장 부산 교육장 대구 교육장	TEL: (043)268-2631~2 TEL: (031)689-7101 TEL: (051)310-6860 TEL: (053)603-7744	FAX : (043)268-4384 FAX : (031)689-7113 FAX : (051)310-6851 FAX : (053)603-7788	코리아FA(익산) 동남산전(김해) 디에스산전(청주) 지이티시스템(구미)	TEL: (053)438-8002 TEL: (055)265-0371 TEL: (043)237-4816 TEL: (054)465-2304	FAX: (053)838-8001 FAX: (055)265-0373 FAX: (043)237-4817 FAX: (054)465-2315
					10310001557

#### · Disclaimer of Liability

LSIS has reviewed the information in this publication to ensure consistency with the hardware and software described. However, LSIS cannot guarantee full consistency nor be responsible for any damages or compensation, since variance cannot be precluded entirely. Please check again the version of this publication before you use the product.

© LSIS Co., Ltd 2012 All Rights Reserved.